
Bamboo Primary Teaching Easel

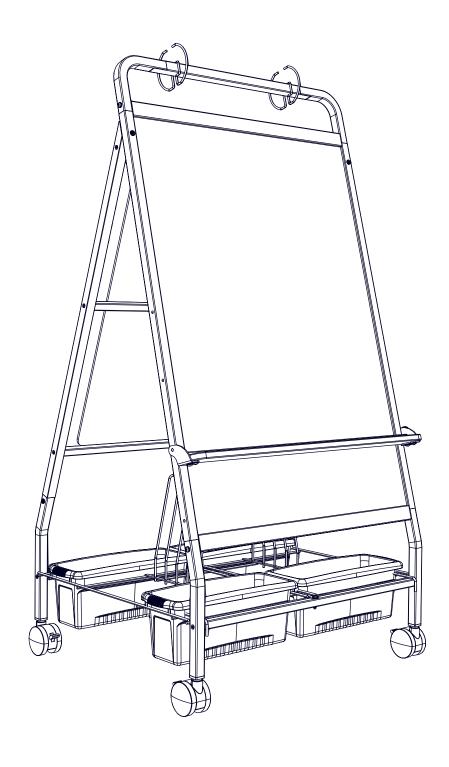

Assembly Guide

Check out our other products online at **www.copernicused.com**For assistance, please contact us by telephone at **1-800-267-8494** or email at **info@copernicused.com**.
Have your packing slip ready for reference.





Customer Service & Warranty Information

Dear Educator,

Thank you for purchasing the Bamboo Primary Teaching Easel. We hope it meets your expectations and you and your students enjoy using it at your school.

Every day we see and hear stories of teachers going above and beyond to help students thrive. Thank you so much for all you do – you are awesome, and you make a difference.

Thank you for inspiring us.

If you have any questions, concerns or ideas on how we can improve please let us know by contacting our Customer Solutions Ninjas at 1-800-267-8494 or *info@copernicused.com*.

Happy teaching,

Kaylyn Belcourt, President kaylyn@copernicused.com

Belieut

We do not inherit the earth from our ancestors, we borrow it from our children.

Change is the end result of all true learning.

What you leave behind is not what is engraved in stone monuments, but what is woven into the lives of others.

Education is the most powerful weapon which you can use to change the world.

- NATIVE AMERICAN PROVERB

- LEO BUSCAGLIA

- PERICLES

- NELSON MANDELA

For missing parts and other issues regarding your product:

Please contact Customer Service, where we will be happy to help. Telephone: 1-800-267-8494, Monday - Friday 8:00am - 4:30 pm EST Email: info@copernicused.com

Need Support? Have a Question?



Email **Customer** Service

Check out some of our other great products!



www.copernicused.com



Register your Product

Registering your warranty ensures we have all the information we need to make any future warranty claims quick and easy. Please visit **www.copernicused.com/warranty** and complete the form within 10 business days from product assembly. By registering your product, you will be entered into a draw to win Copernicus product.



Make a Warranty Claim

We offer a Lifetime Warranty on almost everything we make. Please call **1-800-267-8494** or email **info@copernicused.com** to start your warranty claim. Proof of purchase will be required upon warranty claim (i.e. copy of invoice).

Replace your Whiteboard

Have a well-used whiteboard that needs replacing? Our whiteboards carry a five-year warranty and replacement parts program after the warranty period. Please call **1-800-267-8494** or email **info@copernicused.com** to get a new whiteboard for your Copernicus product!

Bamboo Variations

Bamboo has natural variations that are considered normal and are not covered under warranty (i.e. grain irregularities, knots, color). For more information, visit our website at www.copernicused.com/lifetime-warranty.

Tips for Assembly

Before You Begin:

- · Lay out and identify all of the included parts.
- The hardware has been packed according to step.
- Read the assembly guide over once to familiarize yourself with them.

As You Assemble the Unit:

- Follow the steps in sequence.
- Before beginning each step, find the part(s) that you need for that step.
- The title of each step states what you will be doing. Review the text and the pictures as you build the unit.

Watch for These Helpful Symbols:



The symbol denotes a step needing extra attention to ensure it is done correctly.



Important Information! Warning!

Please read the warnings below for important safety information regarding your product. Failure to read these warnings or to follow the instructions below could result in personal injury or damage to your product that could void your warranty.



Small Parts

In its unassembled state, this product contains parts that can be hazardous to small children. This product should be assembled by an adult.



Adult Supervision

This product is to be used under the supervision of an adult.



Climb Hazard Do not climb on, hang from or suspend objects from any components of your product unless otherwise specified.



Indoor Use Only This product is intended for indoor comercial use only. To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The internal components are not sealed from the environment.



Bamboo Maintenance

When needed, wipe down with mild soapy water. A mild disinfectant can be used. A mild bleach water solution (1:50) can also be used. Wipe cleaning solution off after application.


Recommended cleaning frequency is once monthly, and at minimum, once per school year.


DO NOT leave standing water or cleaning solutions on the bamboo surface.


DO NOT use harsh chemicals to clean surfaces.


Parts

Before beginning, you should have:

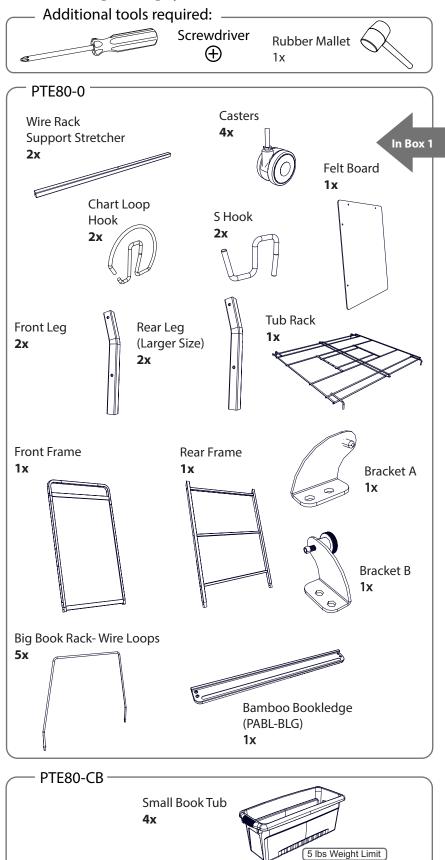

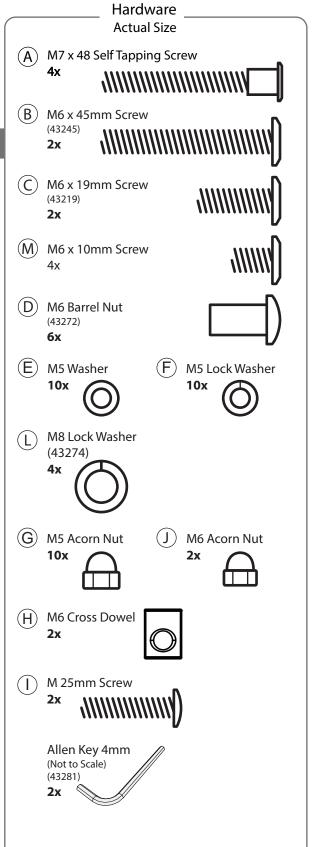


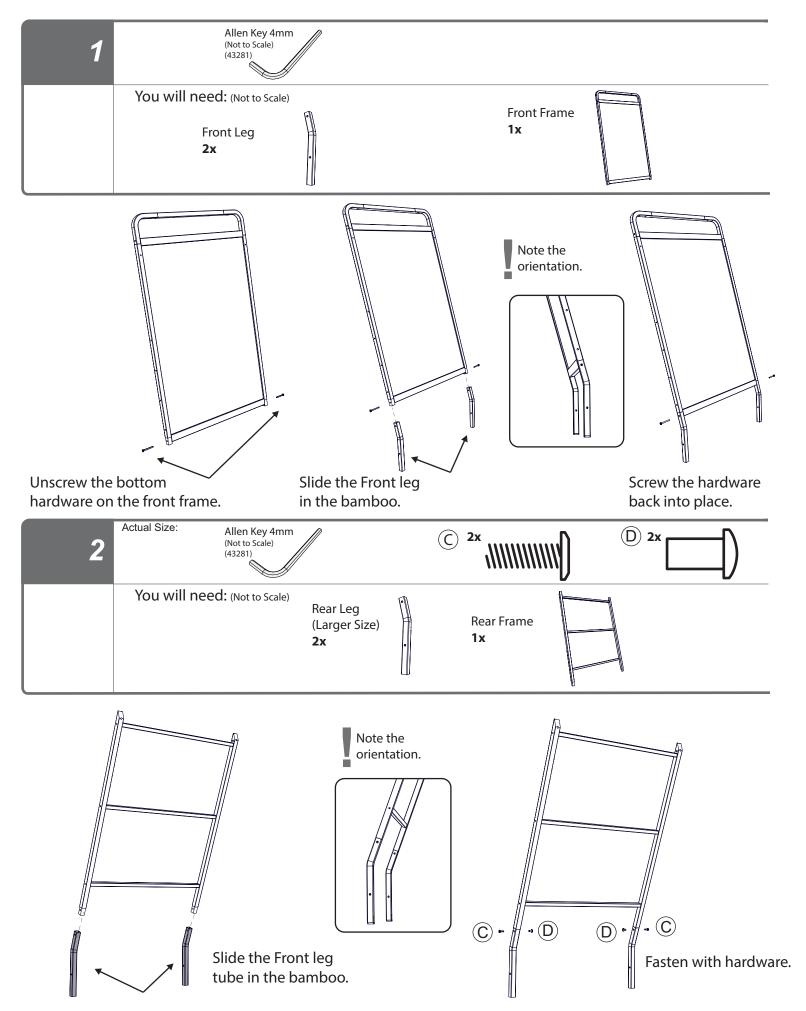


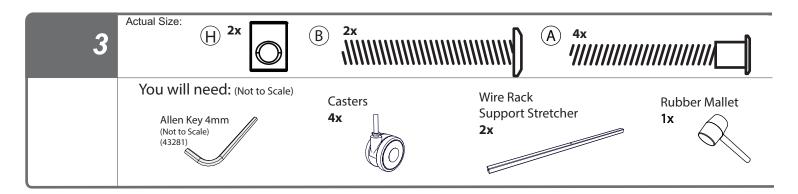

Bolt Front & Rear Frame Together




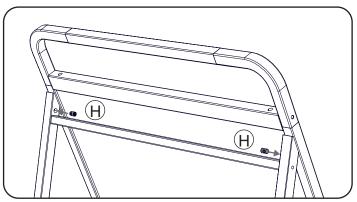

 






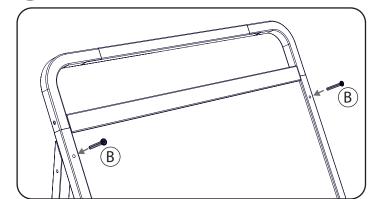

Install Casters




 
You may rest the unit on its side when installing casters






Install Wire Rack Tub Stretchers

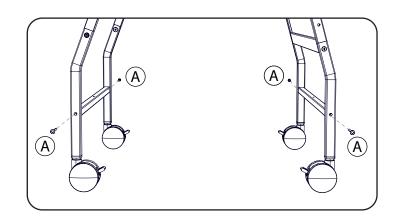

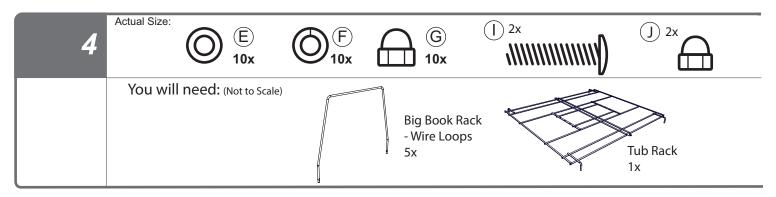



Assemble Big Book Rack - Wire Loops onto Tub Rack

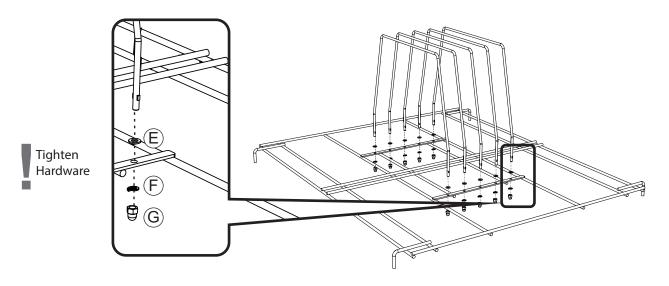


Install Tub Rack

Tilt the Tub Rack when inserting it into the Frame.

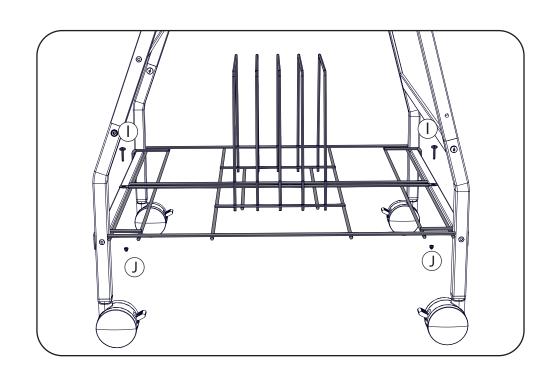

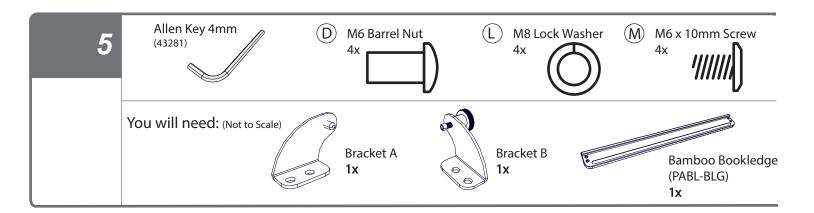

Assemble Book Ledge

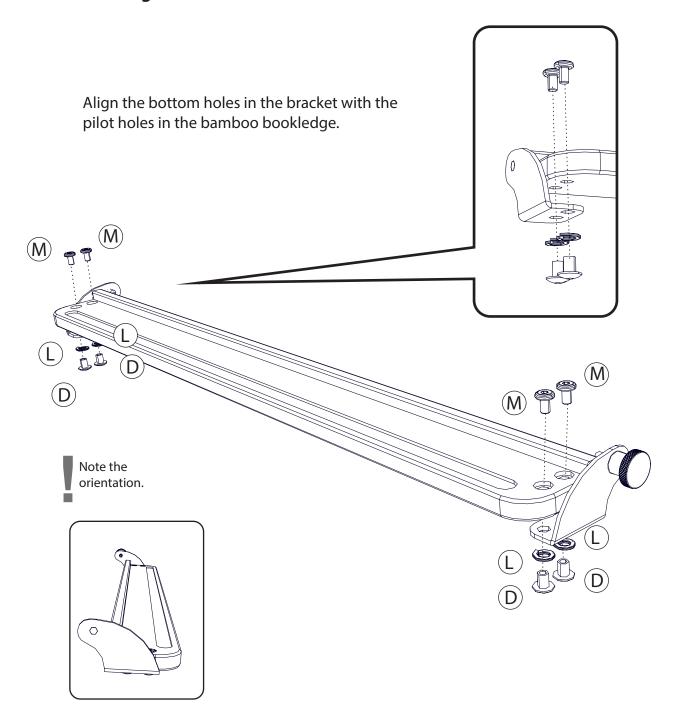


6

You will need: (Not to Scale)







Install Book Ledge

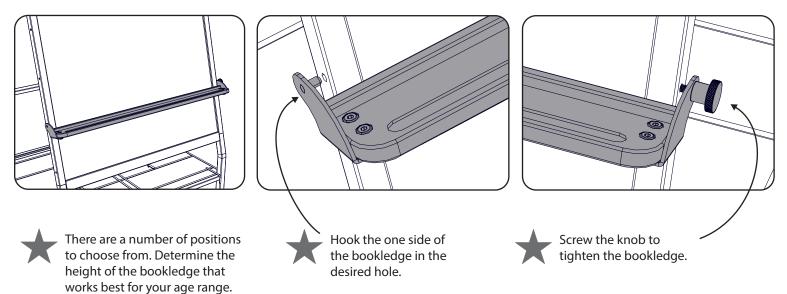

Install Tubs

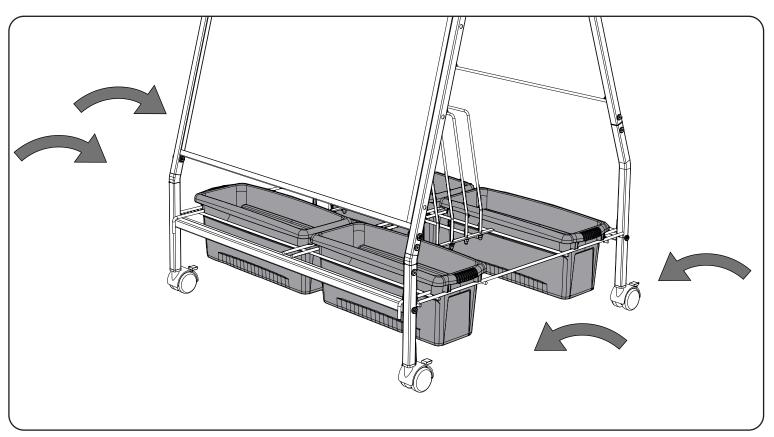

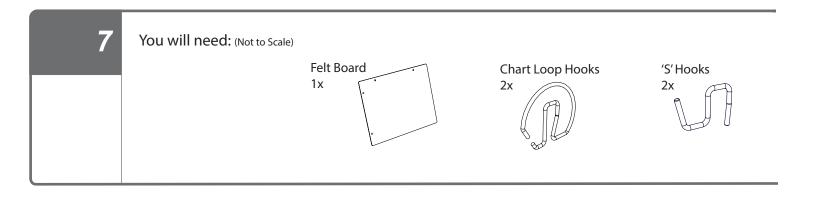

Install Chart Loop Hooks, 'S' Hooks and Felt Board on backside of the easel.

